



Kurio Touch 4S Speaker Replacement

This guide will show you how to replace the speakers in your Kurio Touch 4S.

Written By: Moin Khan





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Detailing Brush](#) (1)
 - [Soldering Station](#) (1)
-

Step 1 — Speakers



- Make sure to open the back cover easily using the plastic opening tool.

Step 2



- Remove back cover by prying away from the device.
- ⓘ The easiest place to remove the cover is from the bottom and top; try to open it from the right and left sides.
- ⚠ Open it gently. Do not open it with too much pressure, so that the plastic back cover do not break.

Step 3




- To remove the battery, make sure the four 5mm Philips screws on each side of your device is open using the Phillips #1 Screwdriver
- After you remove your four 5mm Philips screws, use your plastic opening tool to help you open the plastic cover of your device.

Step 4



- After you remove your four 5mm Philips screws, use your plastic opening tool to help you open the plastic cover of your device.

Step 5

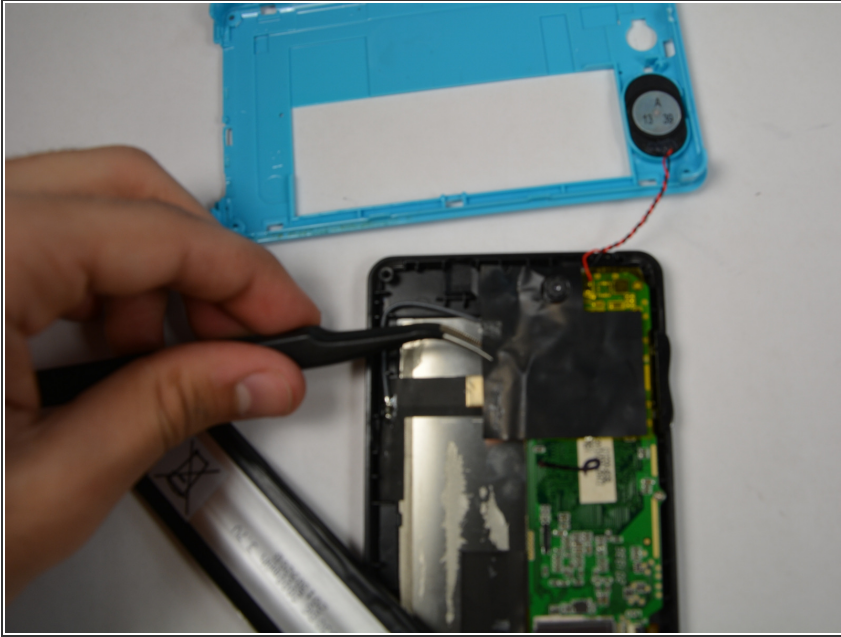

- Gently remove the plastic cover that is covering the camera.

Step 6




- Separate the two halves of your Kurio Touch 4S and lay them besides each other.

Step 7




- Use the soldering tool to detach the speaker wires.

 For more information on how to solder the wires [Click here](#)


Step 8



- Press the speaker in the manner shown so that it comes out of its slot.

 Be sure not to apply too much force or you can break the back cover.

Step 9

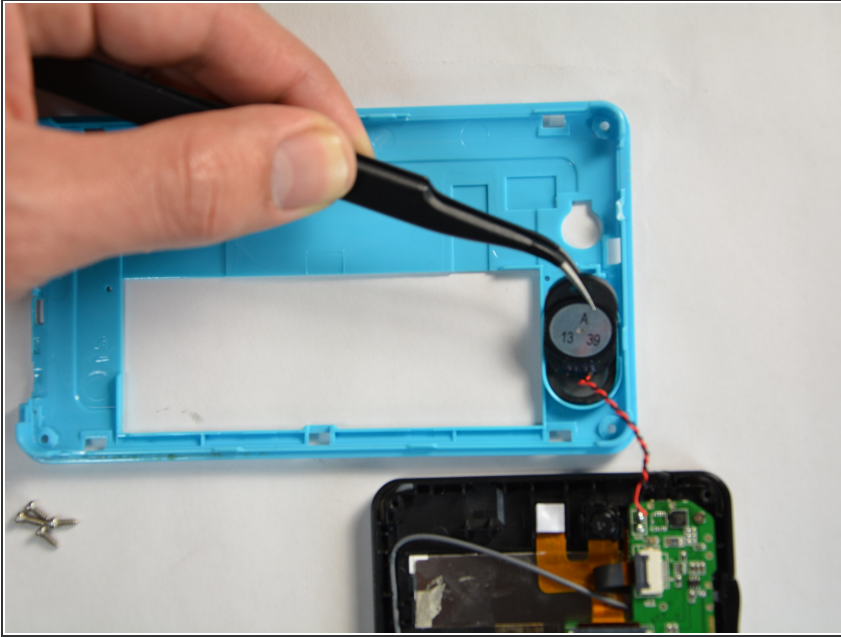

- Use the Tweezers to remove the speaker from its place.

⚠ Remove the speaker gently.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 03:49:47 PM.